


# Epulse50 Mechanical Dimensions

This page shows the mechanical dimensions of the **Epulse50** servo drive. The drawing gives the overall dimensions, the mounting holes, and the connection positions required for the installation.

3D Model (Step format):

[www.nilab.at/dokuwiki/lib/exe/fetch.php?media=epulse50\\_dc\\_servodrive:d-ftd50-0003-3.zip](http://www.nilab.at/dokuwiki/lib/exe/fetch.php?media=epulse50_dc_servodrive:d-ftd50-0003-3.zip)

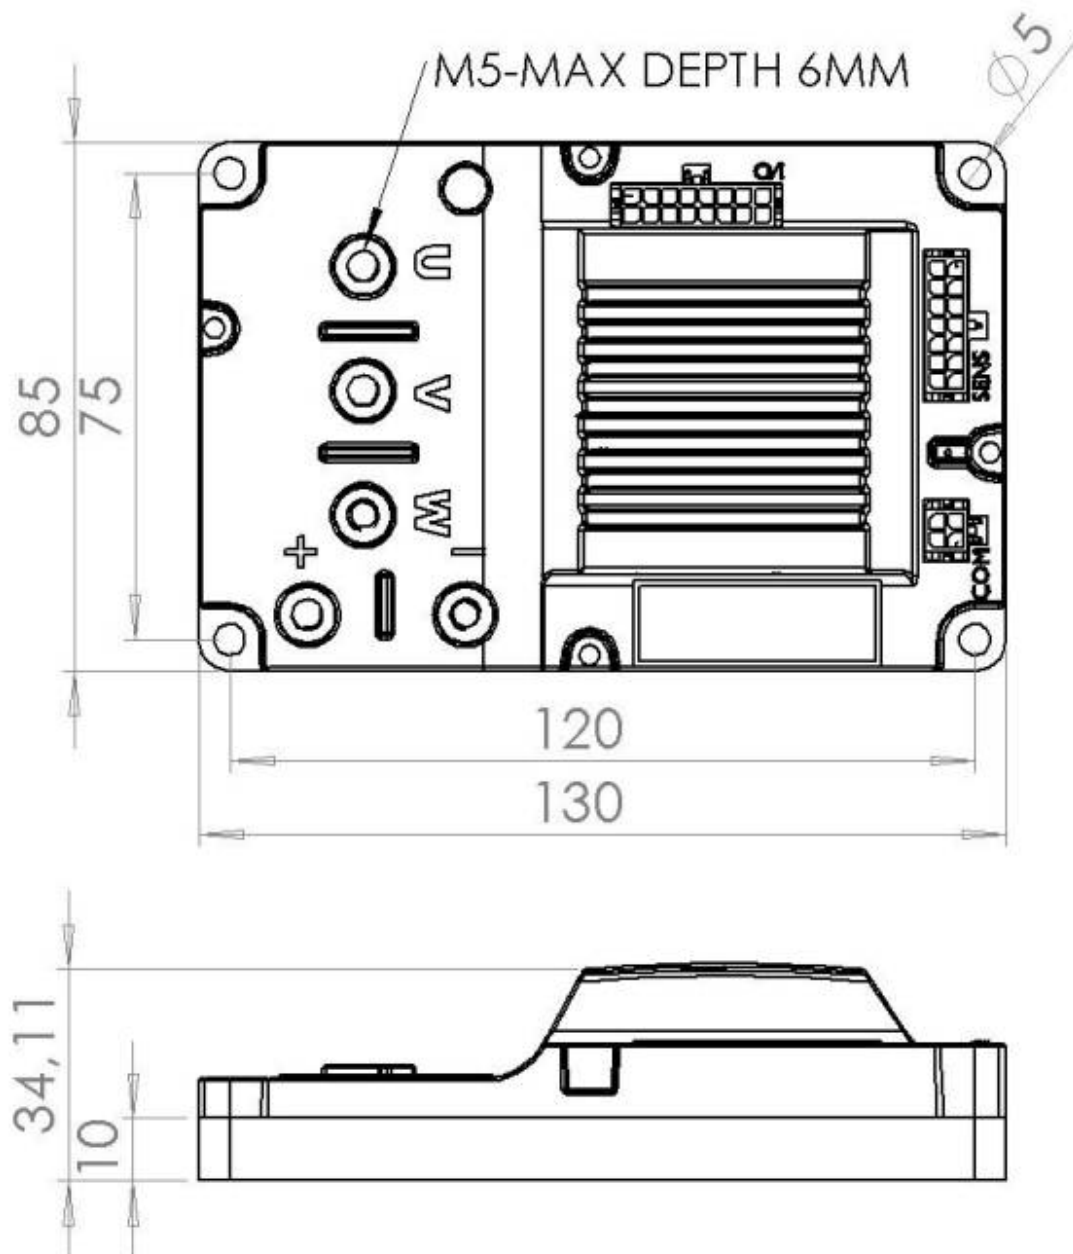

## Installation notes

- Verify the mounting clearance and the cable routing before installation. - Respect the minimum distances for cooling and for connector access. - The dimensions are nominal; refer to the 3D model

for the exact geometry.

From:

<https://dokuwiki.nilab.at/> - **NiLAB GmbH**  
**Knowledgebase**

Permanent link:

[https://dokuwiki.nilab.at/doku.php?id=en:epulse50\\_dc\\_servodrive:mechanical](https://dokuwiki.nilab.at/doku.php?id=en:epulse50_dc_servodrive:mechanical)

Last update: **2026/09/11 07:54**

