


# Fixing accessories

This page shows the **fixing accessories** of the Motolab actuator. The accessories are used to mount the actuator and to connect the output.

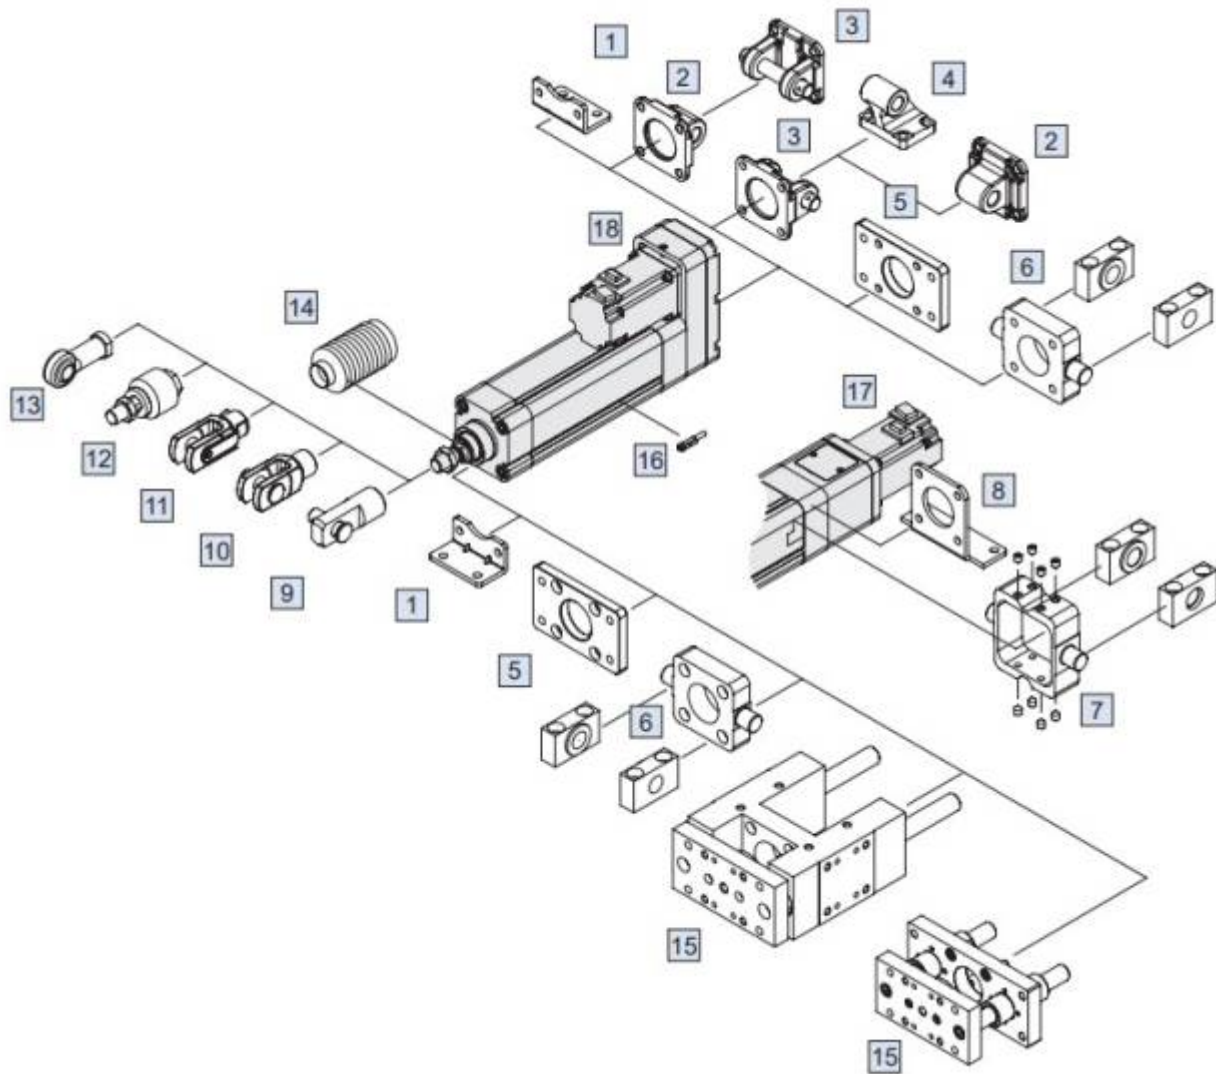

## Notes

- The fixing accessories are matched to the actuator size.
- Use the correct mounting accessories for the application.
- The output screw is M16x1.5 mm; refer to the mechanical construction page.
- For the ordering and the selection, refer to the ordering code page.

From:

<https://dokuwiki.nilab.at/> - **NiLAB GmbH**  
**Knowledgebase**

Permanent link:

[https://dokuwiki.nilab.at/doku.php?id=en:motolab\\_actuator:fixing](https://dokuwiki.nilab.at/doku.php?id=en:motolab_actuator:fixing)

Last update: **2026/09/11 07:58**

