


Ports and connectors

This page shows the ports and connectors available on the NL7-EC servo drive. The connector layout depends on the drive model and its voltage rating.


NL7-EC F 230VAC Servo Drive

The illustration below shows the connector arrangement of the 230 VAC model.

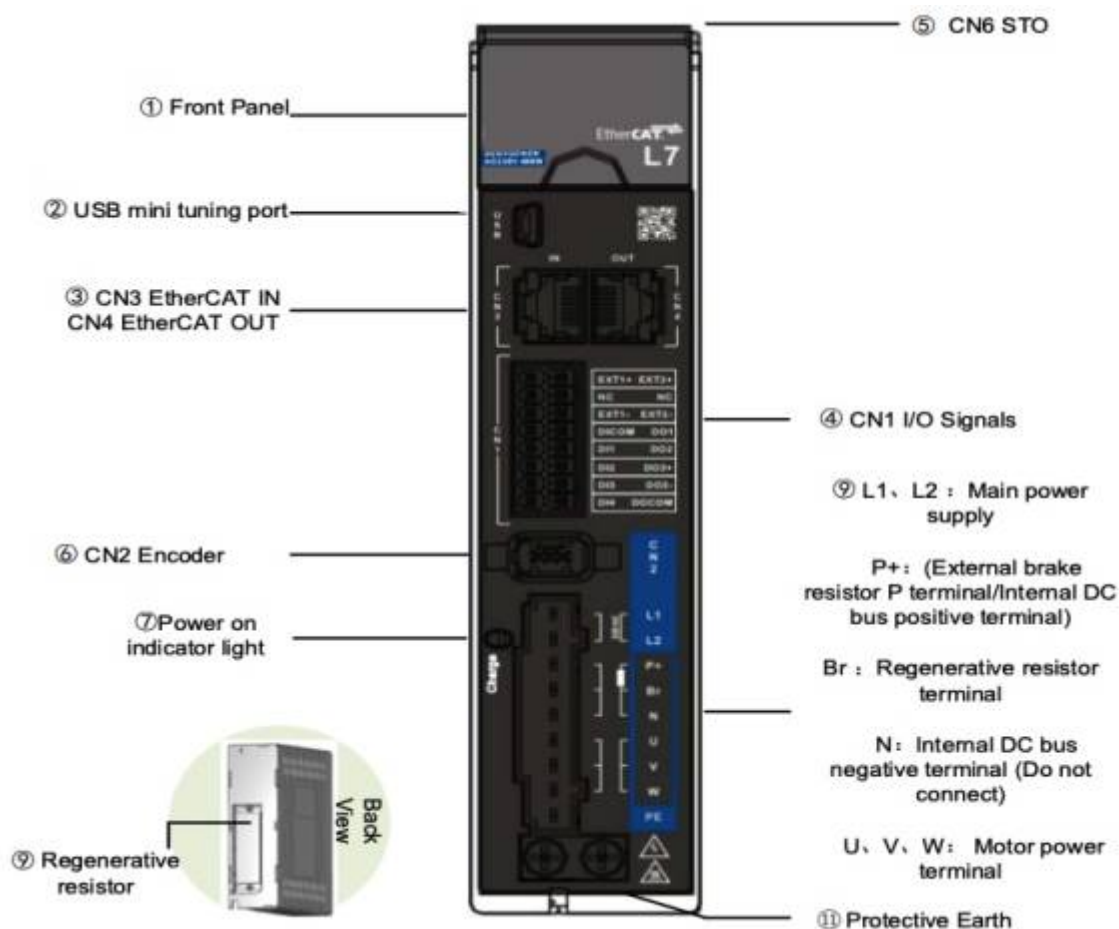

NL7-ECFT 400VAC Servo Drive

The illustration below shows the connector arrangement of the 400 VAC model.

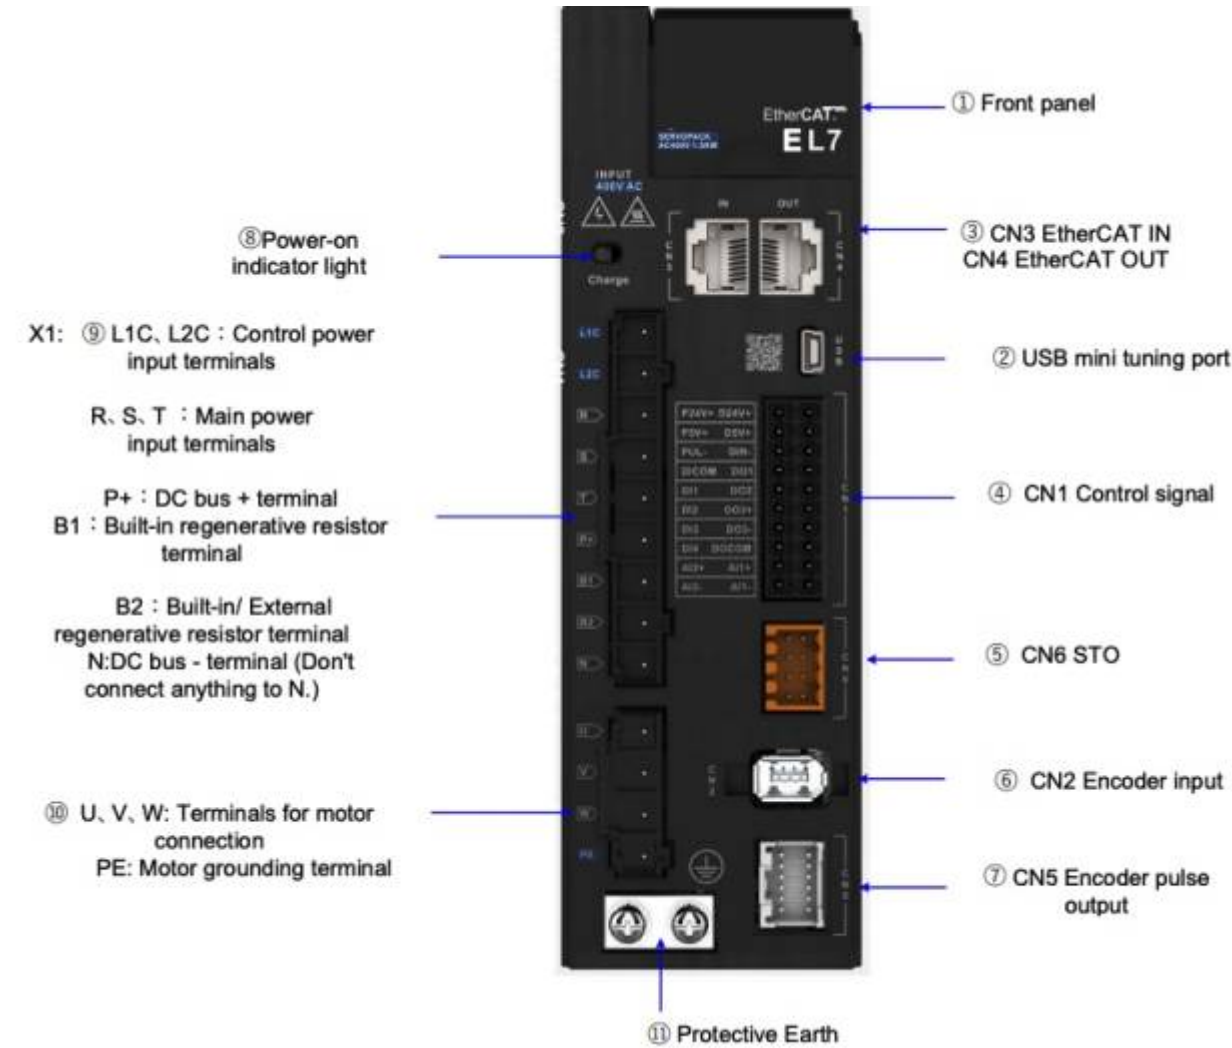

Connector overview

Connector	Function
Power / motor	Main supply and motor phases
Encoder	Encoder feedback interface (see encoder output page)
Fieldbus	EtherCAT / CANopen communication
Digital I/O	Digital inputs and outputs for control and status
Safety	STO / safety-related inputs

The exact pin assignment of each connector is shown in the corresponding pinout page. Use the correct mating connectors and cable types as listed in the accessories page.

From:

<https://dokuwiki.nilab.at/> - **NiLAB GmbH**

Knowledgebase

Permanent link:

https://dokuwiki.nilab.at/doku.php?id=en:nl7_servo:ports_connectors

Last update:

2026/09/11 07:58

