

## Servo Drive Label

the label is laser marked on the bottom of the drive. Label reports the following information:

- Model name
- Serial number S/N#
- Rated Voltage
- Rated Current and Peak Current
- CE marking and country of origin

Here an example:



From:

<https://dokuwiki.nilab.at/> - NiLAB GmbH  
Knowledgebase

Permanent link:

[https://dokuwiki.nilab.at/doku.php?id=epulse50\\_dc\\_servodrive:label](https://dokuwiki.nilab.at/doku.php?id=epulse50_dc_servodrive:label)

Last update: **2023/11/07 14:06**

