


Transportation and storage

Products in store rooms must be designated with a warning plate (ATTENTION! STRONG MAGNETS!). Products must never be stored without a cover, always a special non-magnetic packing with the electromagnetic gap of 25 mm must be used.

Warning plates must be read and complied with. Store rooms must be protected against weather influence, with the temperature in the range of -5 ÷ +35 °C and at the humidity below 95 %. The rooms must be kept dry and clean.

In the course of transporting the machines or their parts with built-in primary and secondary parts their mutual moving must be prevented.

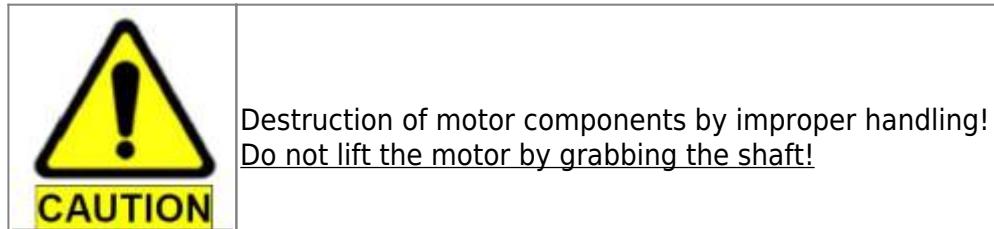

Destruction of motor components by improper handling!
Do not lift the motor by grabbing the shaft!

From:

<https://dokuwiki.nilab.at/> - **NiLAB GmbH**

Knowledgebase

Permanent link:

https://dokuwiki.nilab.at/doku.php?id=integrated_drive_motors:handling_and_transport

Last update: **2023/09/21 07:15**

