

Rules for the use of the product

Transport

In order to not damage or avoid a product failure is required to follow the following rules:

- The transport must be made by qualified personnel and in original packaging.
- Avoid shocks or excessive pressure on the packaging

During transport the temperature must be between -20 ° C and $+75\text{ ° C}$, max.rate of change 20 ° C / h

C, max.rate of change 20 ° C / h

- Relative humidity max. 95%, noncondensing
- Avoid electrostatic discharge. Discharge its electrostatic charge before handling the servo amplifier; avoid contact with highly insulating materials as plastic materials or synthetic fabrics; place the servo amplifier on a conductive surface.
- In case of visible damage to the packaging, check the unit for visible damage and notify the shipper and the manufacturer.

Storage

- Only the original manufacturer's packaging
- Storage temperature -20 ° C $+75\text{ ° C}$
- Storage relative humidity max. 95%, noncondensing

From:

<https://dokuwiki.nilab.at/> - **NiLAB GmbH**
Knowledgebase

Permanent link:

https://dokuwiki.nilab.at/doku.php?id=mbd_servo_drive:rules

Last update: **2023/09/21 07:16**

