



Carriage Mounting / Dismounting procedure

In order to replace the linear guiding blocks or a damaged magnets, please proceed as following:


Step 1 - Remove the standard M5 linear guiding blocks screws from the carriages

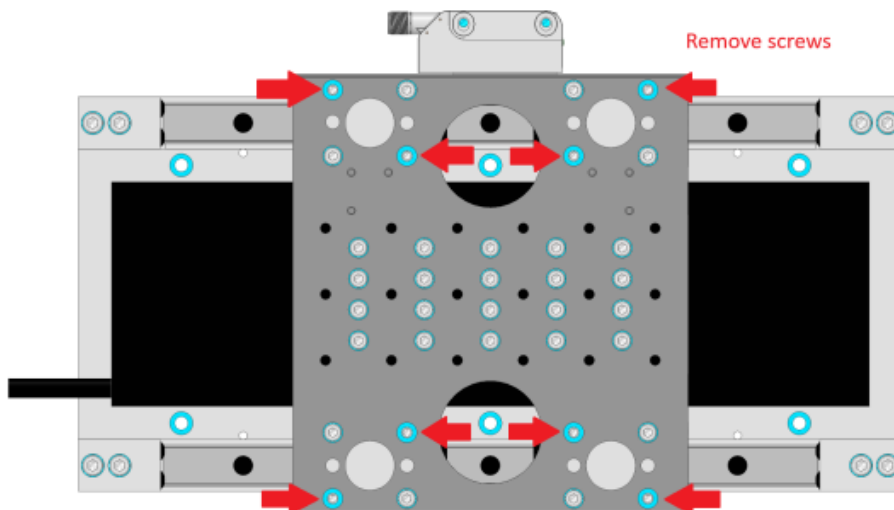


Step 2 - Mounting M5x50 screws instead of the M5 standard screws

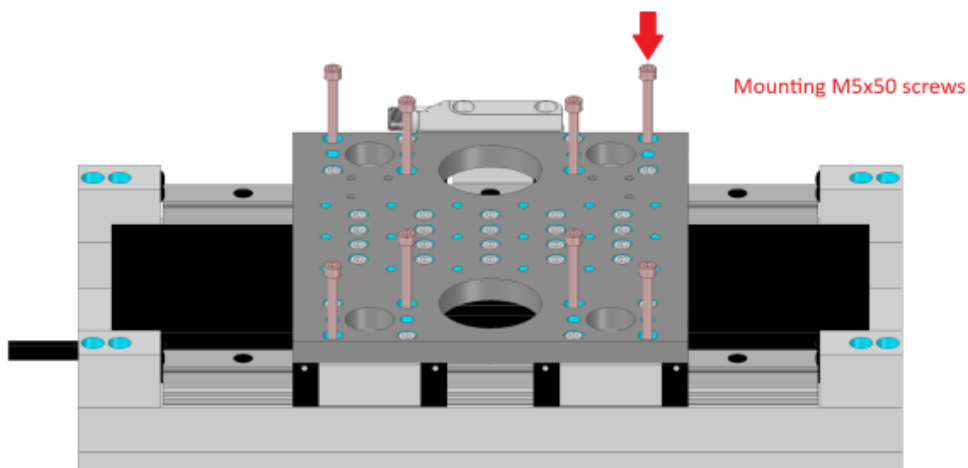

Step 3 - Remove the linear guiding blocks screws

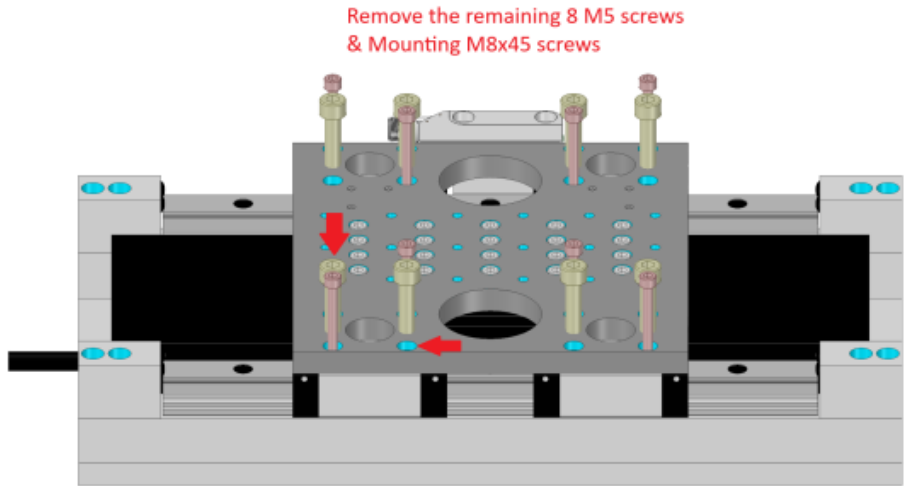


Step 4 - Screw the M8 screws to lift the carriage

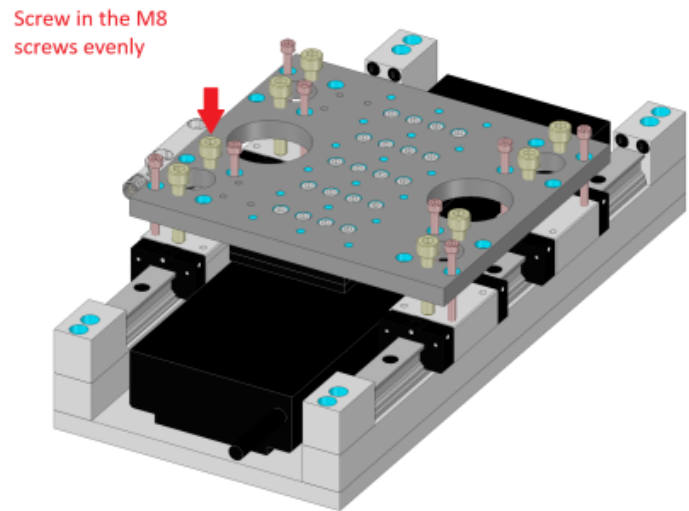

Step 5 - Insert a wood block between the primary part and the magnet and remove the M5

Remove the M5x50 screws
& Lift upwards away

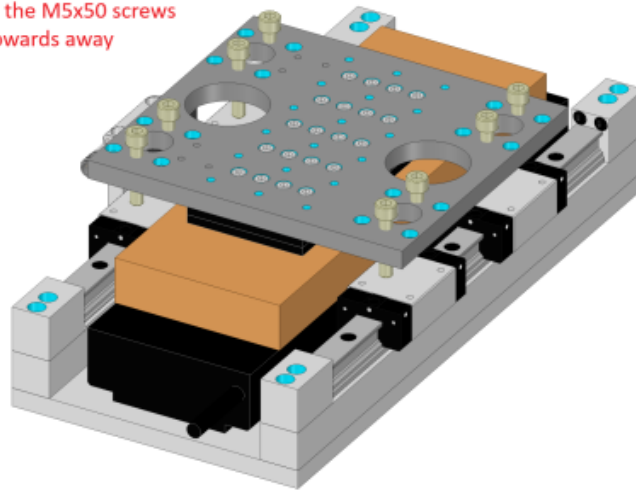

From:

<https://dokuwiki.nilab.at/> - NiLAB GmbH
Knowledgebase

Permanent link:

https://dokuwiki.nilab.at/doku.php?id=rm_linear:dismounting

Last update: 2026/06/01 14:05

