

Elmo Servo Drive

Installation with Elmo Gold DC Bell

Feedback

The motor feedback must be connecte to the feedback port (DC Bell in port B) with the adapter cable with code DA002030-1M.


Pin(J3)	G-DCBEL ^{XXX} / ^{YYYY} E ^{XX} Q		G-DCBEL ^{XXX} / ^{YYYY} R ^{XX} Q	
	Signal	Function	Signal	Function
1	+5 V	Encoder +5 V supply	NC	
2	COMRET	Common Return	COMRET	Common Return
3	PortB_ENC_A+/SIN+	Channel A+/Sine+	SIN+	Sine+
4	PortB_ENC_A-/SIN-	Channel A-/Sine-	SIN-	Sine-
5	PortB_ENC_B+/COS+	Channel B+/ Cosine+	COS+	Cosine+
6	PortB_ENC_B-/COS-	Channel B-/Cosine-	COS-	Cosine-
7	PortB_ENC_INDEX+/ Analog_Index+	Channel_Index+/ Analog_Index+	RESOLVER_OUT+	Vref f=1/TS, 50 mA Max.
8	PortB_ENC_INDEX-/ Analog_Index-	Channel_Index- / Analog_Index-	RESOLVER_OUT-	Vref complement f= 1/TS, 50 mA Maximum

Pin Positions	Cable Connector
<p style="text-align: right;">GDCBEL043A-F</p> <p style="text-align: center;">8-Pin 2.54 mm Pitch Molex</p>	<p style="text-align: center;">G50L1008A</p> <p style="text-align: center;">8-Pin Molex Plug</p> <p>This cable is included in the cable kit described in Section 3.1.1.</p>


Motor phases

M1,M2 and M3 must be connected respectively to U, V and W phases of the linear motor. Considering the adapter cable DA002030-1M the phases color are M1 ⇒ blue, M2 ⇒ violet and M3 ⇒ brown.

Pin(J14)	Signal	Function	Cable		
			Brushless Motor	Brushed DC Motor	Stepper Motor
1	PE	Protective Earth	Motor	Motor	Motor
2	M1	Motor phase	Motor	N/C	Motor Phase 1+
3	M2	Motor phase	Motor	Motor	Motor Phase 1-
4	M3	Motor phase	Motor	Motor	Motor Phase 2+
5	M4	Motor phase	N/C	N/C	Motor Phase 2-

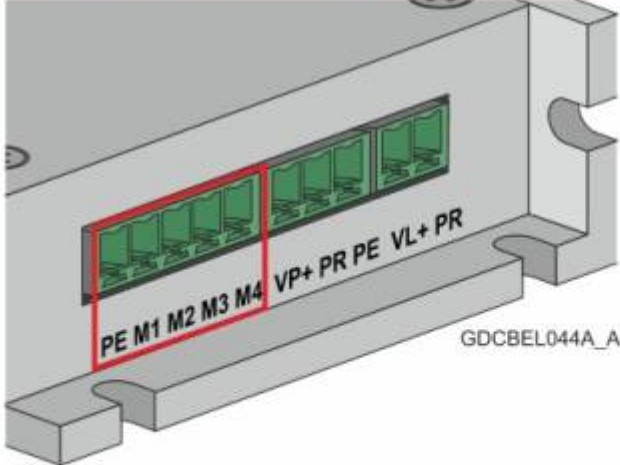

5-Pin Phoenix 3.81 mm Pitch

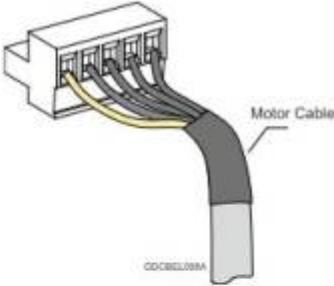

5-Pin Phoenix Plug-in Connector

Configuration

In order to configure ELMO servo drive for NL miniature linear motor following these steps using ELMO Application Studio II from ELMO:

<https://www.elmomc.com/products/application-studio/download-resource-center/>

Motor Settings

Using the data from NL datasheet please insert the right values on the page. For example considering NL120Q we have these values.

Parameter	Value
Motor Type CA[28]	Not in Use
Peak Current [Arms]	5
Continuous Stall Current [Arms]	1,89
Maximal Motor Speed [mm/sec]	6000
Motor Magnetic Pitch (360° N-N) [mm]	60
Using Analog Halls as Feedback	<input checked="" type="checkbox"/>
R - resistance [ohm] phase to phase	2,5691
L - inductance [mH] phase to phase	1,1112
Ke - back emf constant [Vrms/(m/s)]	6,93

Feedback settings

Integrated encoder is SIN/COS 1Vpp connected to the Port B of the drive (here the drive is Gold DC Bell) with a sine period that correspond to 60 mm of pole pitch (NL120Q)

Section	Parameter	Value
General	Sensor Name	Analog Sin/Cos, Port B
	Sensor Type	Linear
	Feedback Control Function	Position + Velocity + Commutation
	Use Digital Halls	No
Sensor Parameters	Direction	Invert
	Multiplication Factor	10
	Glitch Filter (Cycles/sec)	30000
	Absolute Position Offset	-324
	Velocity FIR Filter Window	8
Resolution	micron/cycle	60000
	counts/mm	17,0667

Current Limits


Parameter	Value
Max Current MC [Amp]	20
Drive PL[1] [Amp]	5
Drive CL[1] [Amp]	1,89
Peak Current Duration PL[2] [sec]	1
PWM Output Duty Cycle Limit US[1] [%]	100
Integral Limit US[2] [%] of Max PWM	100

Parameter	Value
Max Voltage BV	100
Motor [Amp]	7,07
Motor [Amp]	2,67

Current Identification


Please perform current identification pushing Identify button on the right up of the window. The drive calculates the phase resistance and induction of the single phase.

The resulted values are the original Phase to Phase resistance and inductance divided by a factor of 2.

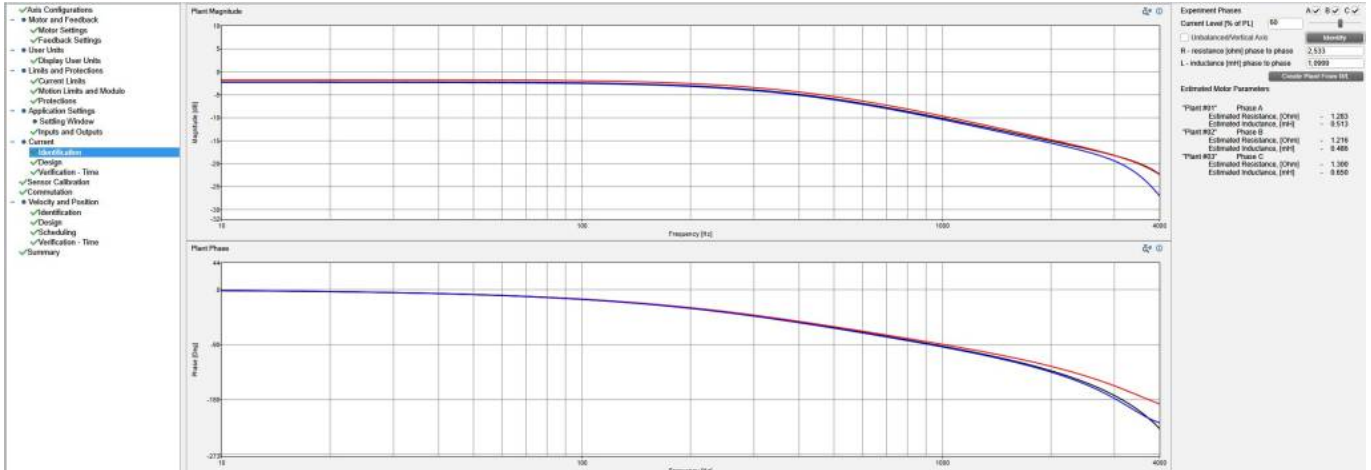

Current Design


Please push the button Design on the right up of the window to perform a calculation of current loop parameters.

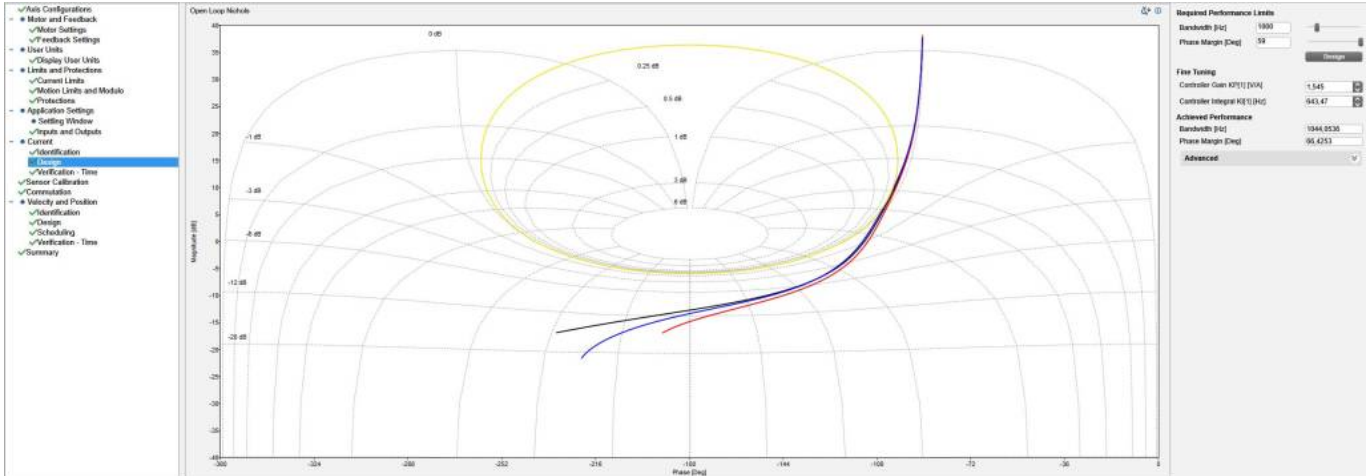

Current Verification - Time

Click on start button on right up of the window to start the verification. The drive is injecting a square wave in a current loop. Please change the values controller gain and controlled integral to be close to the injected square wave profile (green)

The target is to have minimum overshoot and maximum slope on the current feedback signal (blue)

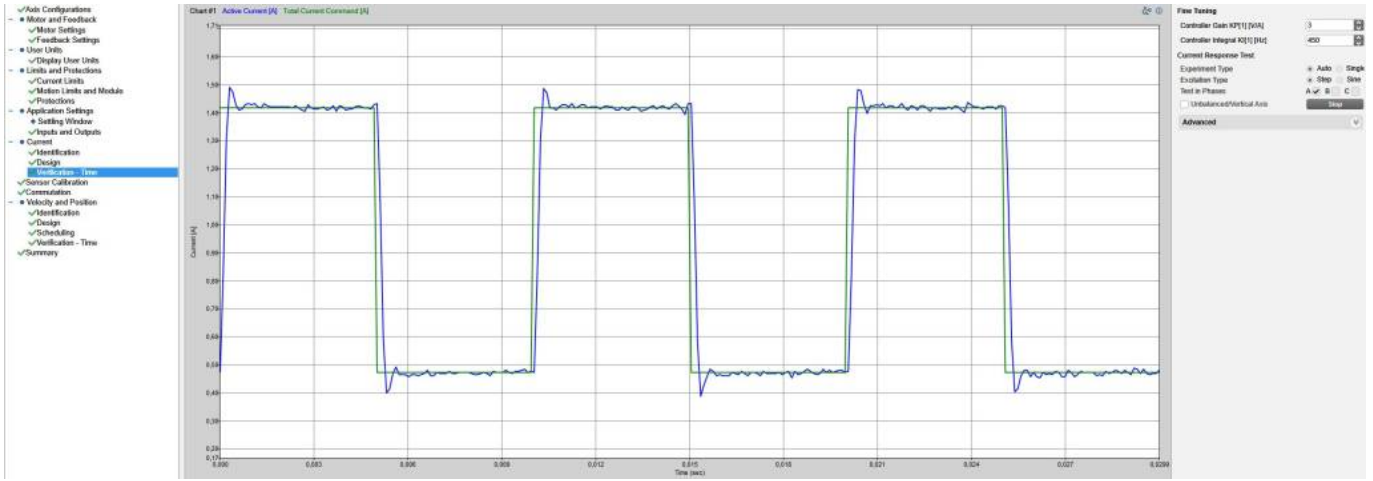


Sensor Calibration

Please specify the right displacement for this calibration, typically at least one sine period ⇒

Displacement [el.cycl] = 1,2.

Then move the slider of the motor in a position to avoid the mechanical stop interaction. With 1,2 on the displacement the motor will be move forward and backward for motor pole pitch x 1,2 = 60 x 1,2 = 72mm.


When the motor is in the right position please press the button calibrate.

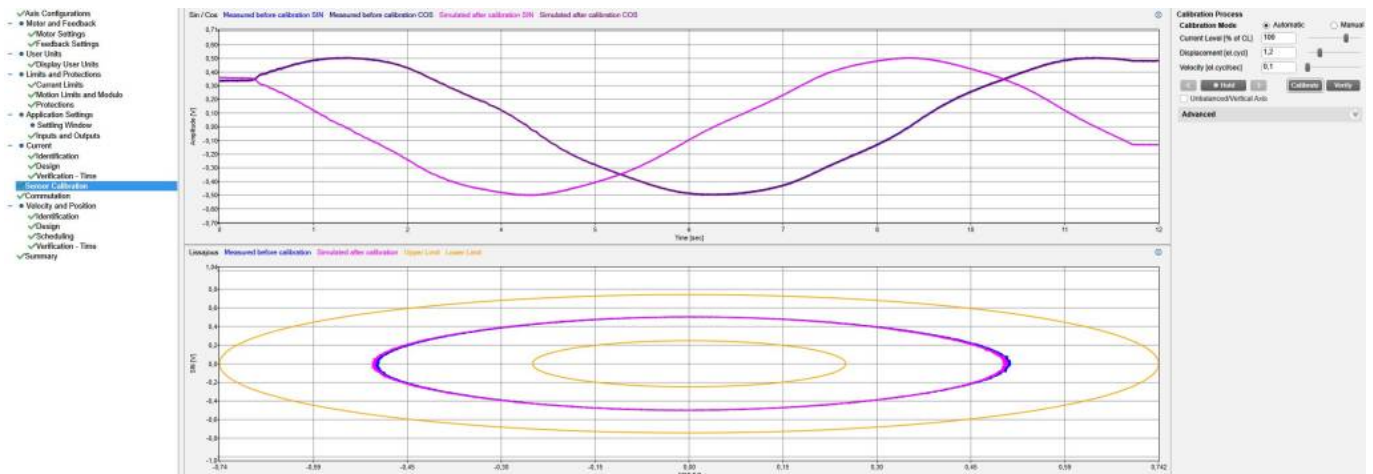

Motor commutation


In order to calculate a store the commutation offset move the slider in a position to avoid the mechanical stop interaction and press the button Run commutation on the right up of the window.

The slider will move for a corresponding span of 1,2 x pole pitch = 1,2 x 60 = 72mm. (the span can be reduces using the parameter Displacement [el.cycl]).

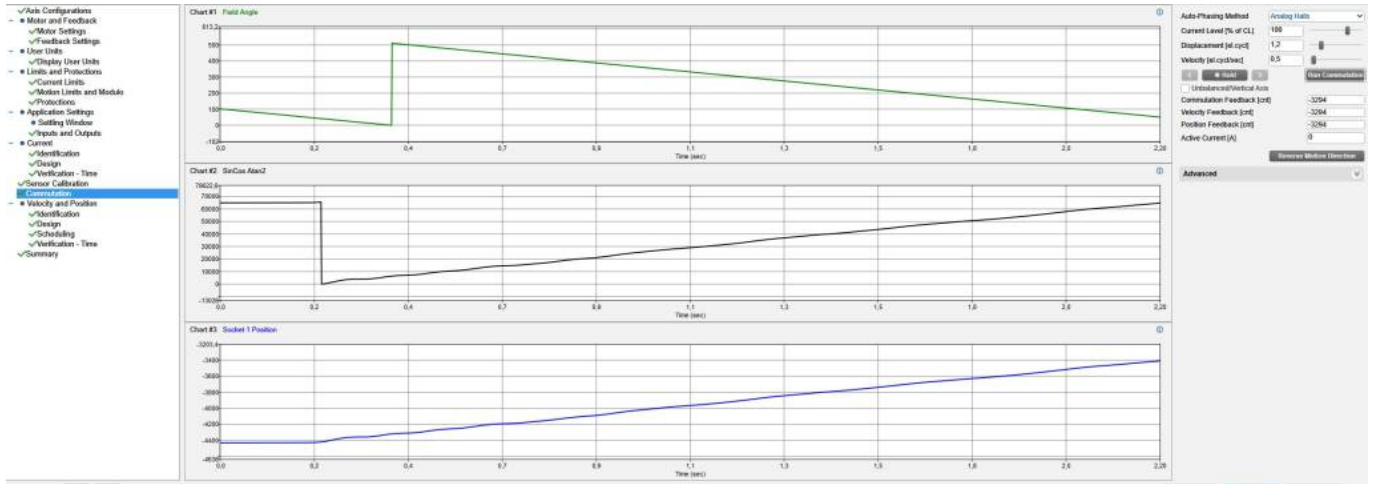


Velocity and position identification

Perform a verification setting control loop mode to Position Closed Loop with a low pass filter value of 800 Hz (typical value for NL120).

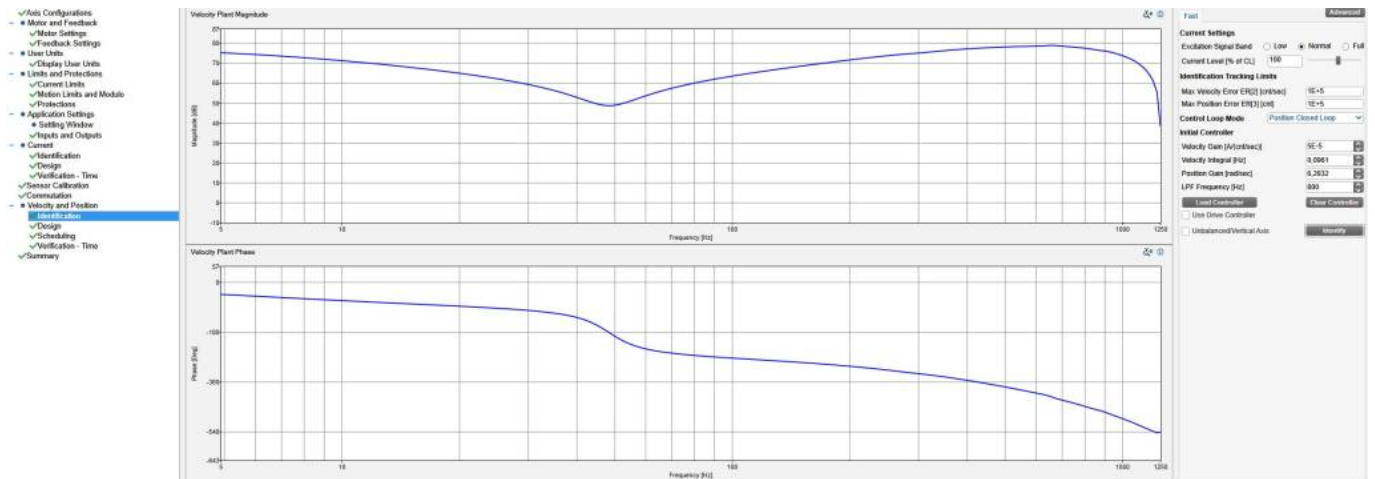


Velocity and position design

Please press the button design to calculate the position and velocity values. Normally, the velocity integral must be increase to increase the stiffness of the slide. Please, enable the motor and increase the value to have slider rigidity. Typical 500 Hz of velocity integral are needed.

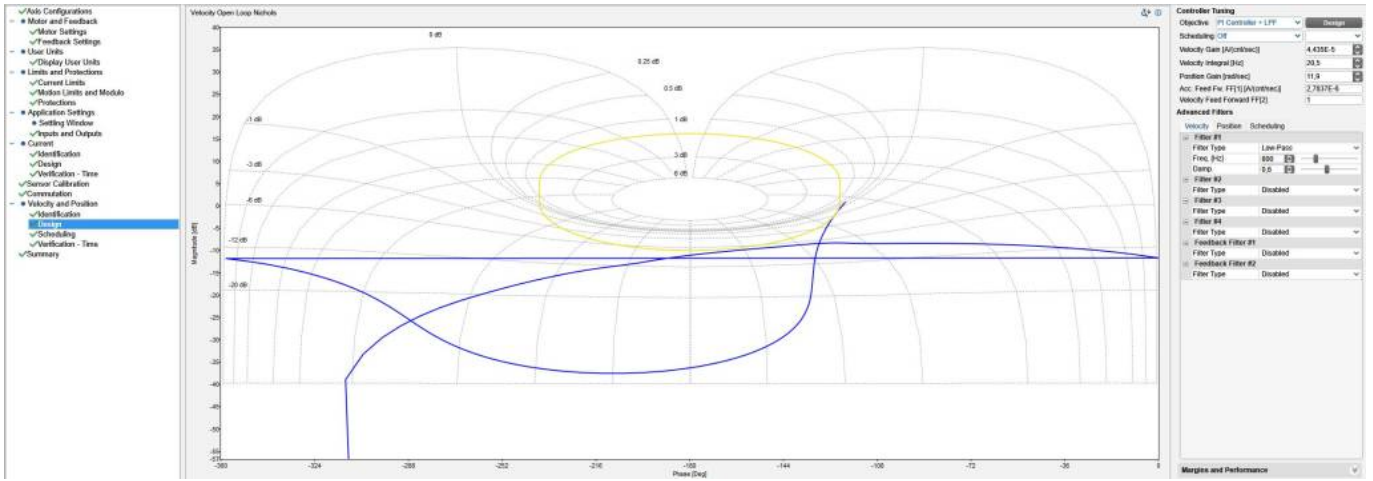

Velocity and position verification - Time

In order to fine tune the motor, please use Verification time window injecting a sine wave on the position loop corresponding to at least 300 counts with a frequency of 1,2 Hz (for example). See the result on the signal position command and position feedback, speed command and speed feedback. Oscilloscope setting are resolution of 800 microseconds with a record time of 2,183sec.

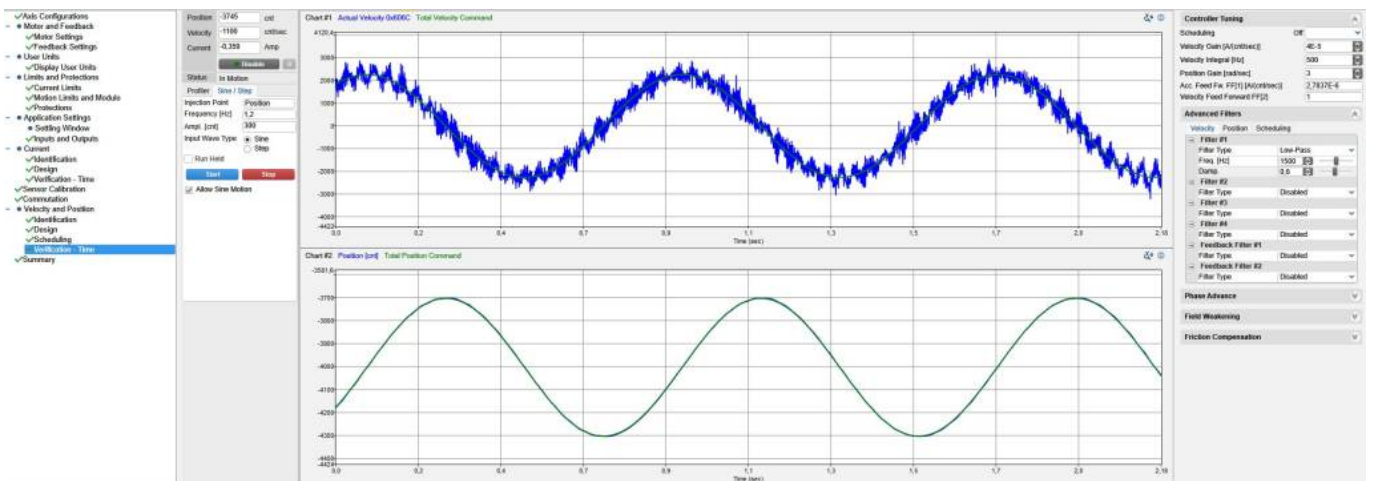

The typical value for NL120Q are: [:miniature_motors:nl120q_elmo_dcbell.zip](#)

Velocity gain [A/count/sec] = 4E-5

Velocity integral [Hz] = 500

Position gain [rad/sec] = 3

Acceleration feed FW [A/count/sec] = 2,78E-6

Velocity Feedforward FF[2] = 1

Low pass filter Freq. [Hz] = 1500

Damping factor = 0,6

From:

<https://dokuwiki.nilab.at/> - **NiLAB GmbH**
Knowledgebase

Permanent link:

https://dokuwiki.nilab.at/doku.php?id=miniature_motors:elmo_drive

Last update: **2024/10/02 08:09**

